



FITTING INSTRUCTIONS


1) OUTWARD OPENING WINDOWS & DOORS

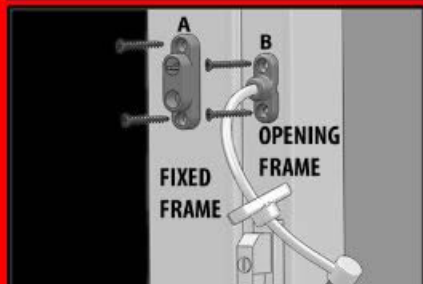

Position the lock unit (A) on the fixed frame and the cable unit (B) on the opening frame. Directly screw provided self-drilling screws with a crosshead screwdriver. Alternatively pilot holes can be pre-drill.

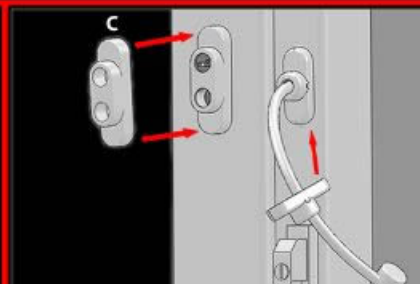


Clip plastic covers (C) in to position over the lock and the cable unit. Once clipped, they can not be removed easily, please do not try it before installation.

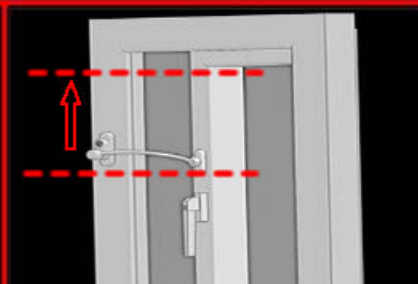


To lock the Penkid, insert the cable pin in to the lock body and push it. To unlock it, turn the key left and remove the pin with your other hand. Please install high enough and keep the key a place children can not reach.


2) INWARD OPENING WINDOWS & DOORS

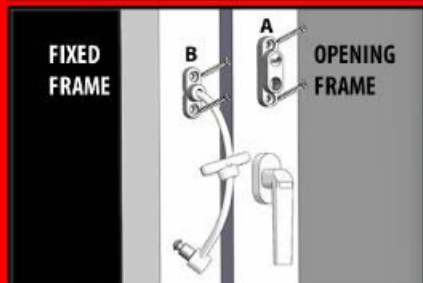

Position the lock unit (A) on the opening frame and the cable unit (B) on the fixed frame. Directly screw provided self-drilling screws with a crosshead screwdriver. Alternatively pilot holes can be pre-drill.

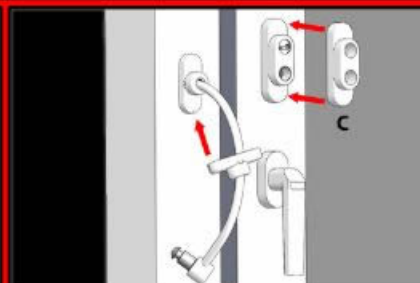

Clip plastic covers (C) in to position over the lock and the cable unit. Once clipped, they can not be removed easily, please do not try it before installation.

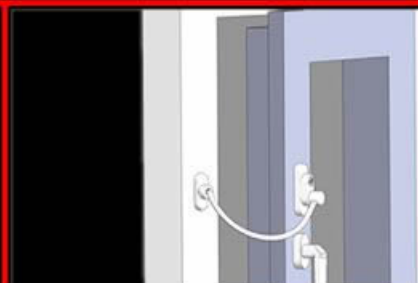

To lock the Penkid, insert the cable pin in to the lock body and push it. To unlock it, turn the key left and remove the pin with your other hand. Please keep the key a place children can not reach.